


STEEL MOLLE DOOR POCKETS

2021+ FORD BRONCO

MPBR-05

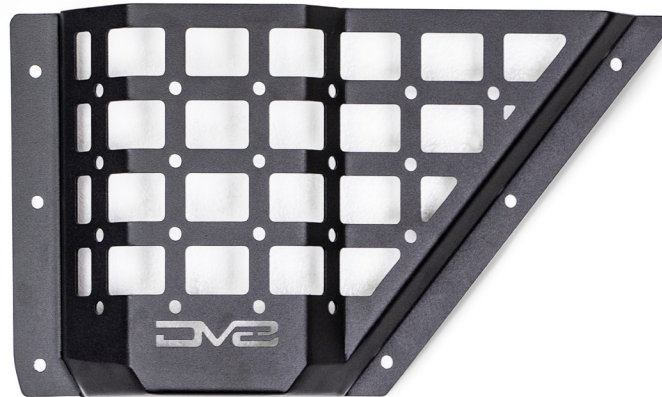

TOOLS REQUIRED

- T-30 Torx Bit
- Ratchet

SKILL LEVEL

- Easy
- 1 (you) person

Little skill level required, you can easily install it by yourself however

TIME REQUIRED

- 30 Minutes

Time to install this should only take about an half an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

Using a T30 torx bit remove all 6 bolts from door pocket. Lightly pull door pocket away from door to remove.



STEP 2

Place the DV8 door pocket on the door and secure using the factory bolts and T30 torx bit.

NOTE: Do not over-tighten these bolts.



INSTALLATION MANUAL



STEP 3

Repeat on other side. Double check all hardware is secure.

