SCAN TO SEE

INSTALL VIDEO

ROCKER GUARDS WITH STEP

(2021+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Rocker Step
(1) RH Rocker Step
(1) Front LH Mounting Bracket (-DF)
(2) Middle/Rear LH Mounting Bracket (-DR)
(1) Front RH Mounting Bracket (-PF)
(2) Middle/Rear RH Mounting Bracket (-PR)
(12) M10x1.50 x 30mm Bolts
(12) M10 Lock Washers
(12) M10 Flat Washers
(12) M8x1.25 x 25mm Combo Bolts

TOOLS REQUIRED

13mm, 16mm Sockets
Ratchet

SKU # FB12818


STEP 1



Install (1) LH front mounting bracket to the threaded holes in the vehicle rocker panel using (2) M10x1.50 x 30mm bolts, (2) M10 lock washers, and (2) M10 flat washers. Do not fully tighten.

Note: Mounting bracket is labeled “-DF”.

STEP 2

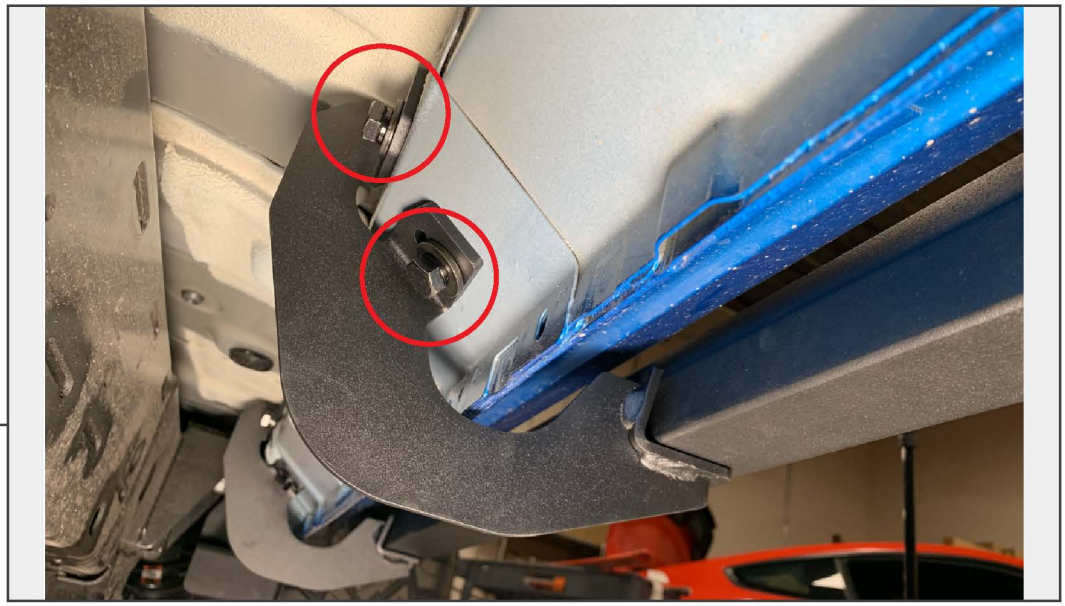

Install (1) LH middle mounting bracket to the threaded holes in the vehicle rocker panel using (2) M10x1.50 x 30mm bolts, (2) M10 lock washers, and (2) M10 flat washers. Do not fully tighten.

Note: Mounting bracket is labeled “-DR”.

STEP 3



Install (1) LH rear mounting bracket to the threaded holes in the vehicle rocker panel using (2) M10x1.50 x 30mm bolts, (2) M10 lock washers, and (2) M10 flat washers. Do not fully tighten.

Note: Mounting bracket is labeled "-DR".

STEP 4



Install the rocker armor to the mounting brackets using (6) M8 x 25mm bolts into the threaded inserts in the rocker armor. Tighten until secure.

Note: The rocker armor is dedicated to each side, note the locations of the threaded inserts.

STEP 5



Fully tighten the mounting brackets to the vehicle. Repeat steps 1-5 to the opposite side of the vehicle.

Installation is now complete.