SCAN TO SEE

INSTALL VIDEO

HD ROCK SLIDERS

(2021+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS


(1) LH Rock Slider
(1) RH Rock Slider
(1) LH Front Bracket - DF
(1) LH Rear Bracket - DR
(1) RH Front Bracket - PF
(1) RH Rear Bracket - PR
(1) LH Middle Bracket
(1) RH Middle Bracket
(16) M10x1.50 x 35mm Bolts
(28) M10 Flat Washers
(4) M10 Lock Washers
(12) M10 Lock Nuts

TOOLS REQUIRED

15mm, 16mm, 17mm Sockets/ Wrenches
Ratchet

SKU # FB15251


STEP 1

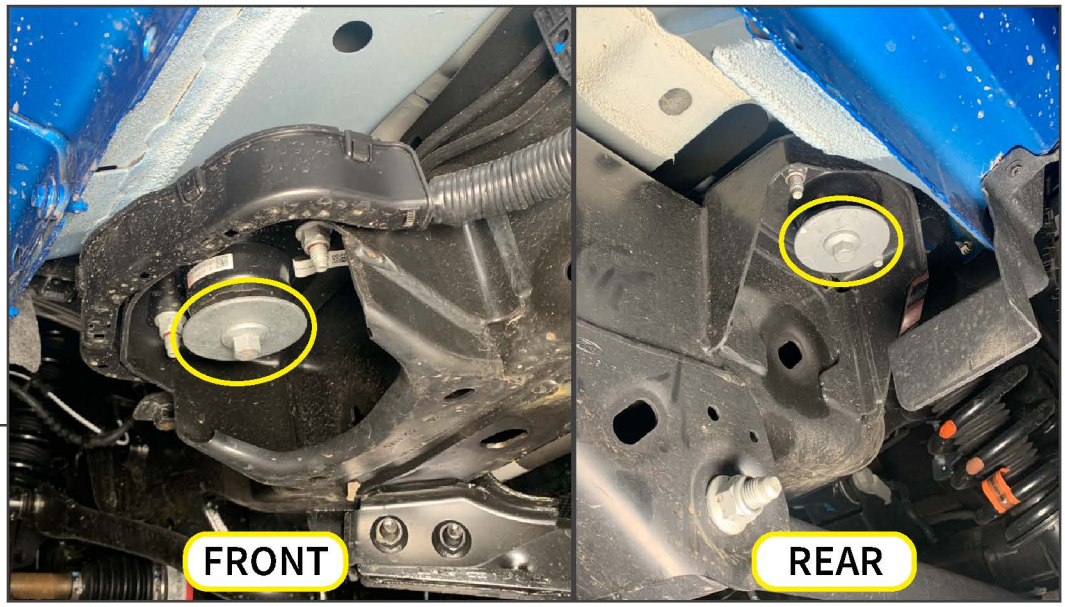

Locate the (2) body mounts on the vehicle. Remove the (1) 15mm bolt per body mount.

Note: It is recommended to use heat on the bolts prior to removal to prevent bolt and bushing damage. *Remove body mount bolts from one side of the vehicle at a time.

STEP 2

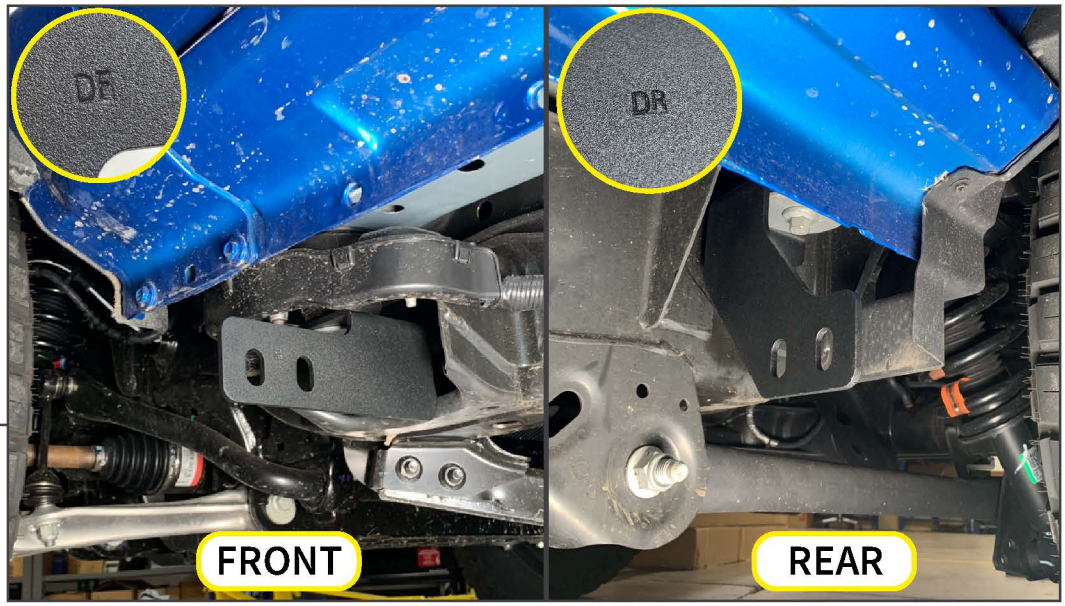

With the body mount bolts removed, align the appropriate mounting bracket to each body mount. Re-install the body mount bolt hand tight to hold each bracket in place.

Note: Mounting brackets are stamped with identification label for each suitable location, see contents list.

STEP 3



Secure the middle mounting bracket to the vehicle using (2) M10 x 35mm bolts, (2) M10 lock washers, and (2) M10 flat washers.

STEP 4



With assistance, align the rock slider to the mounting brackets. Secure the rock slider using (6) M10 x 35mm bolts, (12) M10 flat washers, and (6) M10 lock nuts.

STEP 5



Tighten the body mount bolts to secure the rock slider to the vehicle (Torque to 85 ft. lbs). Repeat steps 1-5 to the opposite side of the vehicle.

Installation is now complete.