

REDROCK

DASH MOUNTED USB HUB 21-24+ BRONCO

SKU # FB28140
Edited: 03/21/2024

1. Procedure



1 Use tools to remove two original bolts.



2 Use a pry bar to disassemble the accessory ready dash mount.



3 Remove the original panel and keep it for yourself.



4 Panel is removed.



5 Use a pry bar to disassemble the Silicon sealed control switches



6 Remove the switch panel and hang it.



7 Put the car into N gear and engage the handbrake.



8 To remove the Center Console Grab Handle, use the L-Long Wrench from the Bronco toolkit.



9 Use a pry bar to remove the panel on the front upper part of the center console.



10 The bottom panel can be removed by prying out the clips.



11 Remove the effect of the bottom panel.



12 Use a pry bar to pry the center console through the front end gap.



17 The entire center control is then pried up all the way.



18 Lift up the central control panel and rotate it until you can see the socket in the next step.



13 Just pry the clips up.



14 Go to the other side and start prying at the clips.



19 Unplug the plug pointed by the arrow.



20 Find the harness in hand.



15 Just pry the clips up.



16 The back end pulls upward as you pry.




21 Refer to the picture and insert one end.




22 Find the plug end of the harness and insert it into the socket mentioned in step 19 (the original vehicle plug has been unplugged).



23 The adapter cable is connected.

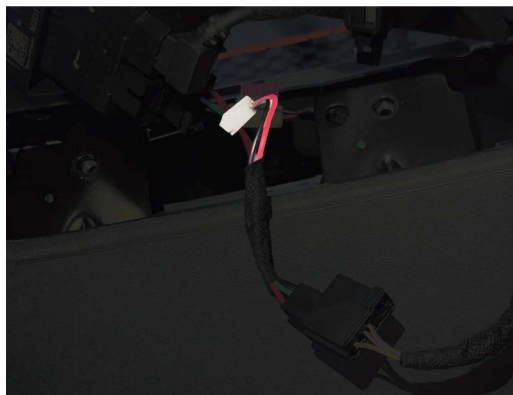

24 The white socket does not currently need to be plugged into any plug.

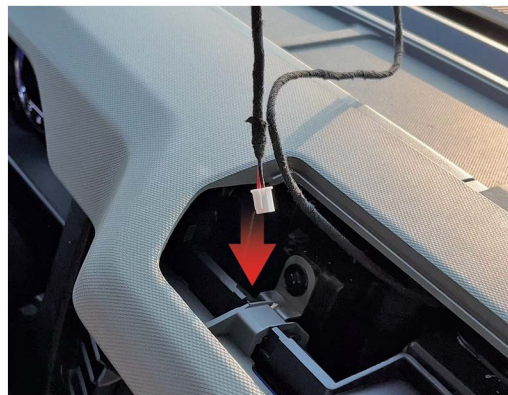


29 Thread the wire through the hole on the driver's side as shown.



30 As much as possible, let the harness go straight in. If you find it difficult, it is recommended to find a steel wire and tie one end of the steel wire with the harness to assist you in threading (before threading, I suggest using a flashlight to shine from below upwards, and you will see a passage!).



25 Start installing the product.

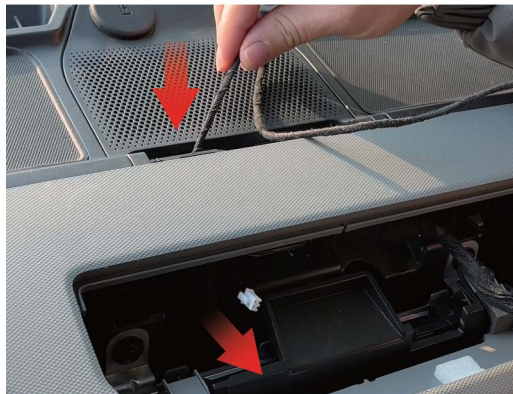

26 Thread the wiring harness on the product from the dash location to the switch panel location.




31 The harness may not pass through directly. You can reach in with your hand to and pull it downwards.



32 The harness is fitted through the route.



27 Pull the harness all the way through.

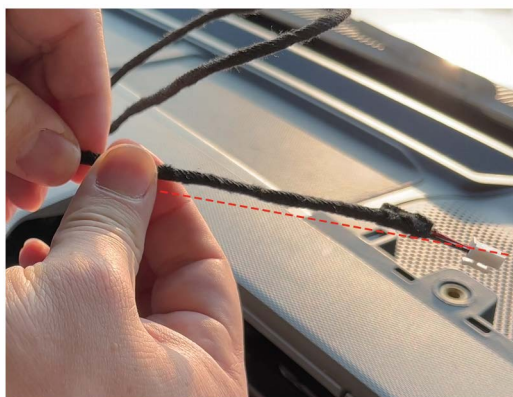

28 Straighten the harness.



33 Plug the white small plug that has been passed through into the remaining white small socket.



34 Install USB HUB.



43 Install the bolts that were removed from the original dash panel.



44 OEM bolts installed.



50 Tighten the grab handle bolts using the L-Long Wrench in the Bronco toolkit.



51 Install the bottom panel by aligning the clips.



45 Align the snaps to recover the switch panel.



46 It is installed when the clips audibly snap into place.



52 Once the snaps are aligned on both sides, snap them upwards.



Installation is now complete.



47 After organizing the adapter harness, re-install the center panel.



48 After organizing the adapter harness, re-install the center panel.