



5-LED FOG LIGHTS

(2021-2025+ BRONCO - WITH MODULAR FRONT BUMPER)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Fog Light
(1) RH Fog Light
(2) Wiring Harnesses
(6) Zip Ties

TOOLS REQUIRED

7mm Socket
T-40 Torx Socket
Ratchet
Panel Removal Tool
Phillips Screwdriver

STEP 1




In the vehicle wheel well, remove the front fasteners from the wheel liner.

STEP 2




Reach upwards behind the vehicle headlight and unplug the headlight wiring harness.

STEP 3

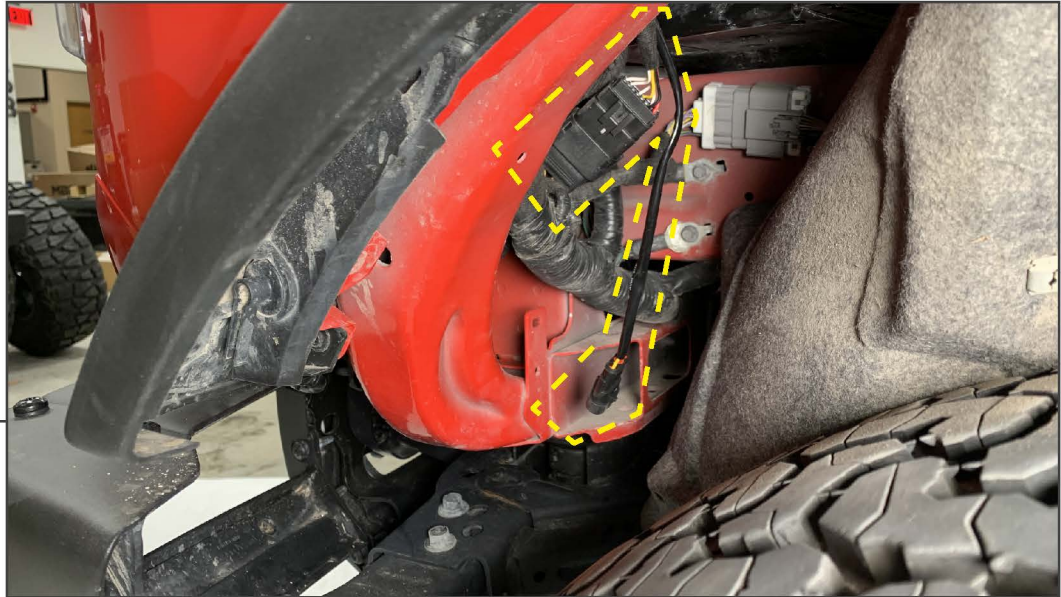

Plug the 'T' harness into the OEM wiring harness. Then, plug the 'T' harness into the vehicle headlight. Route the fog light wiring connector downwards towards the front bumper.


STEP 4

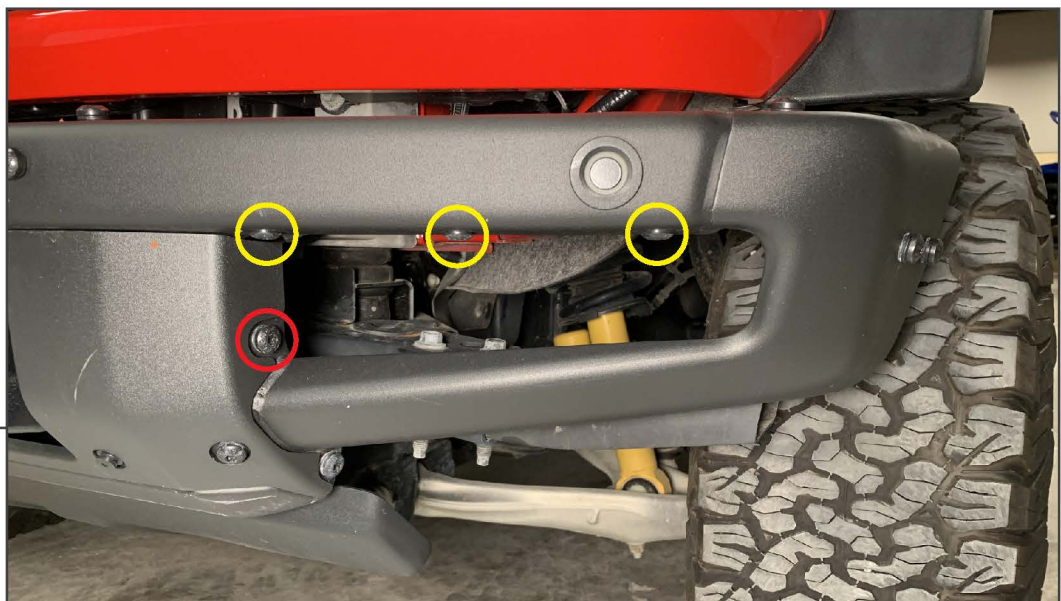

Remove (4) T-40 Torx bolts from the bumper.

Note: The bottom bolt is different from the upper bolts, and must be installed into the original location during assembly.

STEP 5

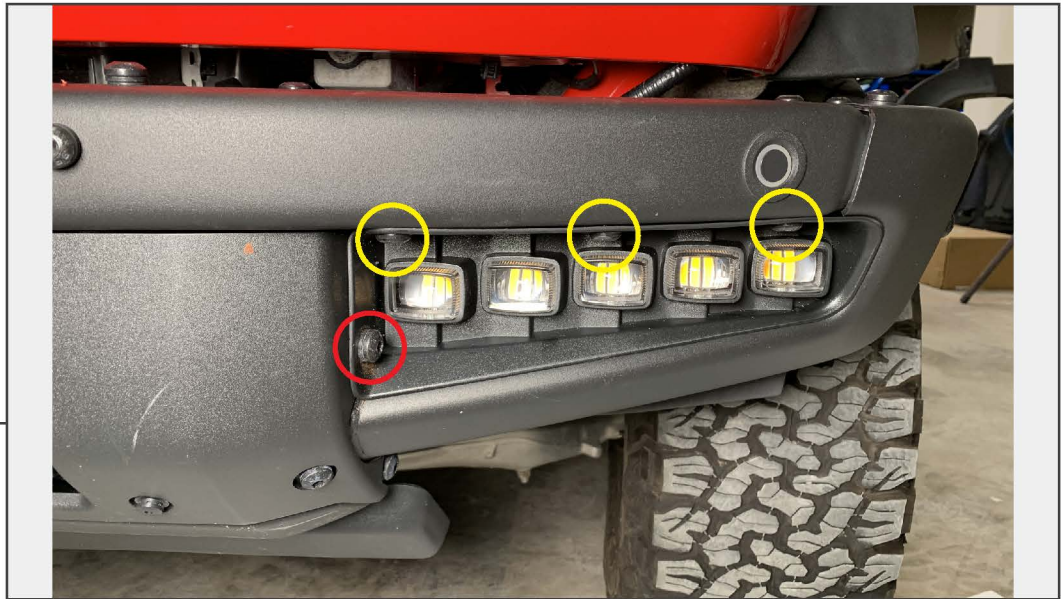

Align and press the fog light assembly into the front bumper. Re-install the (4) T-40 Torx bolts into the original bolt locations, and tighten until secure. Plug the fog light into the 'T' harness connector.

STEP 6



Re-install the wheel well liner to the vehicle using the original hardware.

Repeat steps 1-6 to install the remaining LED fog light assembly.

Installation is now complete.