

QUAD LED FOG LIGHTS

(2021-2026+ BRONCO - WITH MODULAR FRONT BUMPER)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Fog Light
- (1) RH Fog Light
- (1) Wiring Harness
- (1) Butt Connector
- (6) Cable Ties

TOOLS REQUIRED

- 10mm Socket
- T-40 Torx Socket
- Ratchet
- Crimping Pliers

SKU # FB78251

STEP 1



Remove (4) T-40 Torx bolts from the end of the front bumper.

Note: The inner-most Torx bolt is longer than the upper three bolts.

STEP 2




Identify the LH and RH fog light assemblies using the label embossed in the housing. Then, fit the fog light behind the vehicle front bumper and into the bumper cutout.




STEP 3

Secure the fog light into the vehicle bumper using the original (4) T-40 Torx bolts. Tighten all hardware evenly until fully secured.

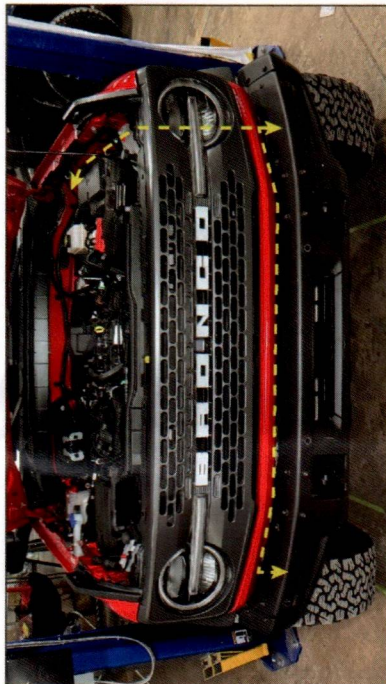

STEP 4

Route the included wiring harness across the front of the vehicle, and then route the Red & Black wire leads towards the vehicle firewall. Use the included (6) cable ties to secure the harness into place. Ensure to route the harness away from any hot/moving components.

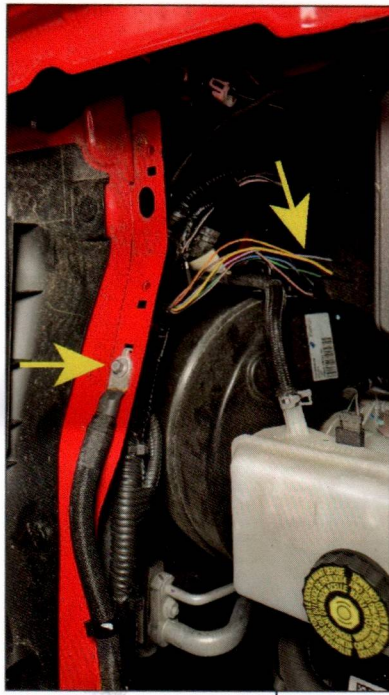

STEP 5

Locate the OEM Upfitter switch wire leads.

- Splice the RED wire on the LED harness into the Green/Brown Upfitter Switch Harness (AUX 2 - 15A)
- Loosen the fire wall ground lead bolt, fit the BLACK wire terminal on top of the vehicle ground cable, and tighten the ground retaining bolt into place.

The LED lighting will work with the vehicle powered on with the AUX 2 switch on.



STEP 6

Installation is now complete.