

REDROCK

3-INCH NERF DROP STEP BARS

PART #: FB80497

FITS:

2021-Up Ford Bronco 4 Door



60-120 min



Cutting Not
Required



Drilling Not
Required


Torque & Tools

Fastener Size	Tightening Torque (ft-lbs)	Wrench Required		Allen Wrench Required	
☐ 6mm	☐ 7-8.5		☐ 10mm		☐ 4mm
☒ 8mm	☒ 18-20		☒ 13mm		☐ 5mm
☒ 10mm	☒ 35-40		☒ 16mm		☐ 6mm
☐ 12mm	☐ 60-70		☐ 18mm		☐ 8mm




BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

Part List

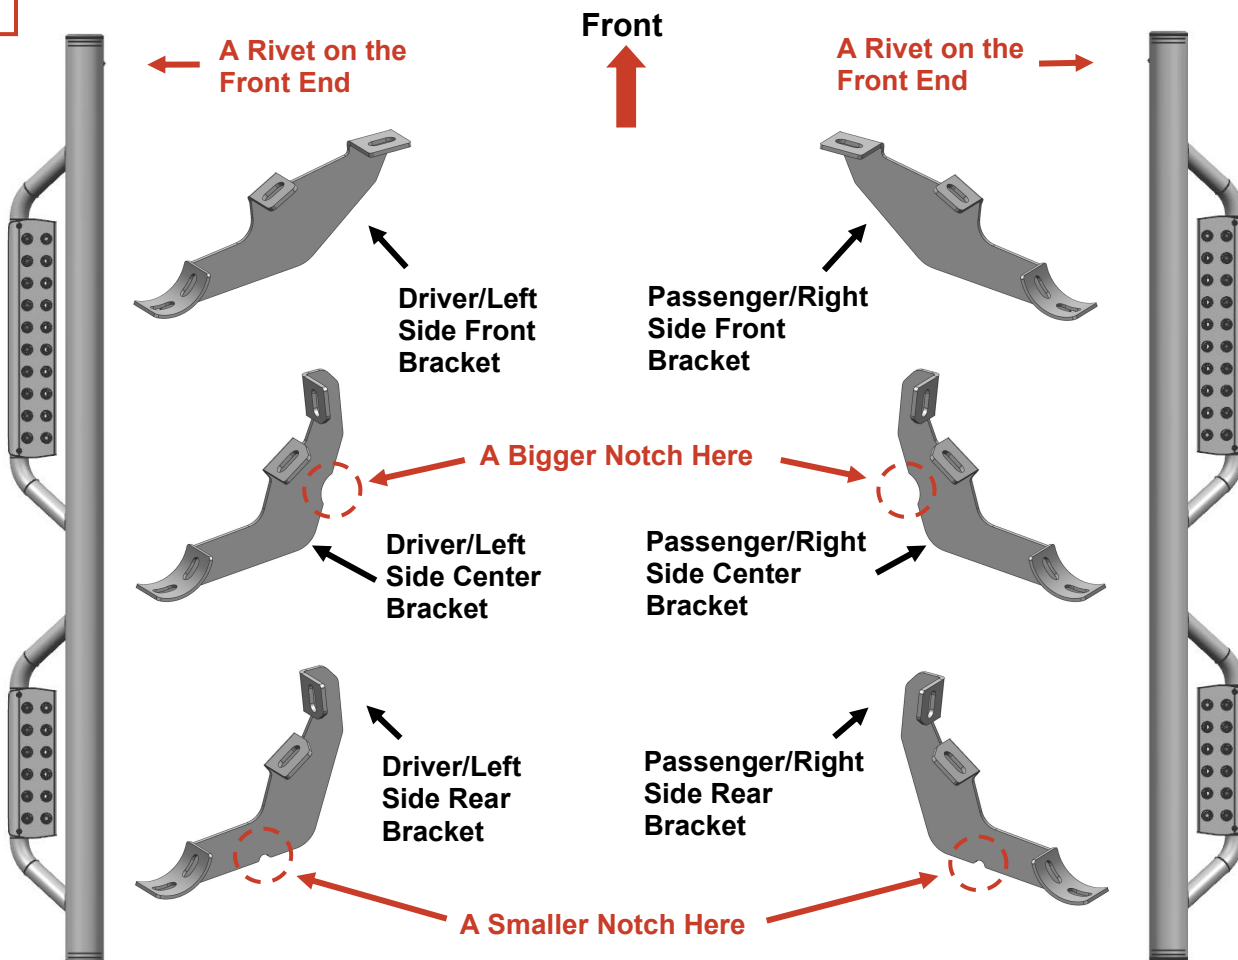

REDROCK

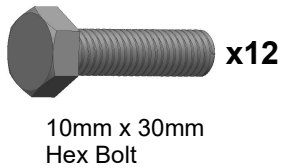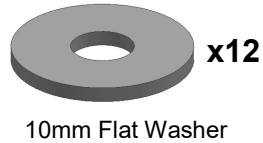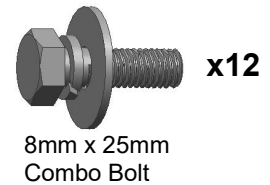


PLEASE NOTE THAT THE FOLLOWING PICTURES ARE BASED ON THE PASSENGER SIDE INSTALLATION

STEP 1

Starting from underneath the Passenger/Right body panel, locate the front mounting location and the threaded holes in the body panel, **(Fig 1)**. Remove the plastic plugs covering the holes.

FIG 1

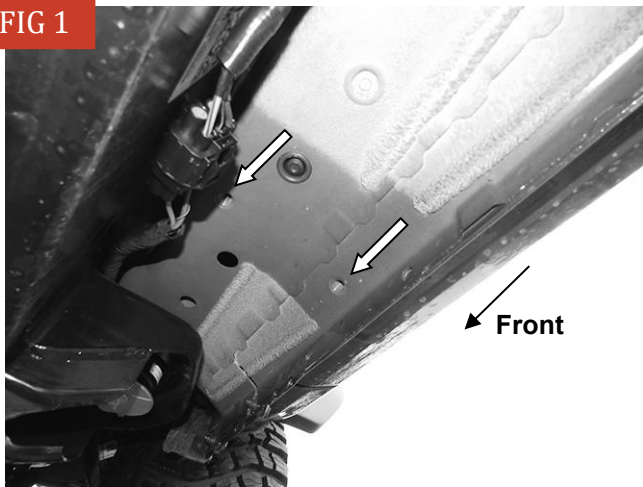


(Fig 1) Passenger/Right front mounting location

STEP 2

Select the Passenger/Right Front Mounting Bracket. Attach the Mounting Bracket to the front location with (2) 10mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers, **(Fig 2)**. Do not tighten hardware.

FIG 2

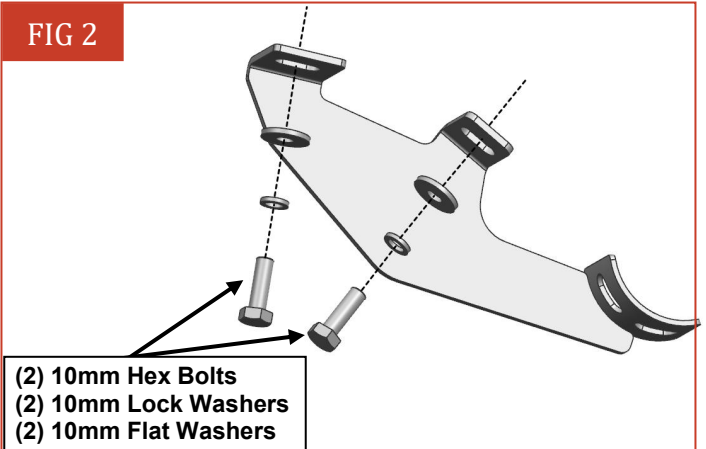


(Fig 2) Attach the Passenger/Right Front Mounting Bracket to the front location

STEP 3

Repeat **Steps 1-2** to attach Passenger/Right Center and Rear Mounting Brackets to the center and rear locations, **(Figs 3-6)**. **NOTE:** There is a **Bigger Notch** on the rear of the Center Brackets and a **Smaller Notch** on the bottom of the Rear Brackets. Do not tighten hardware.


FIG 3

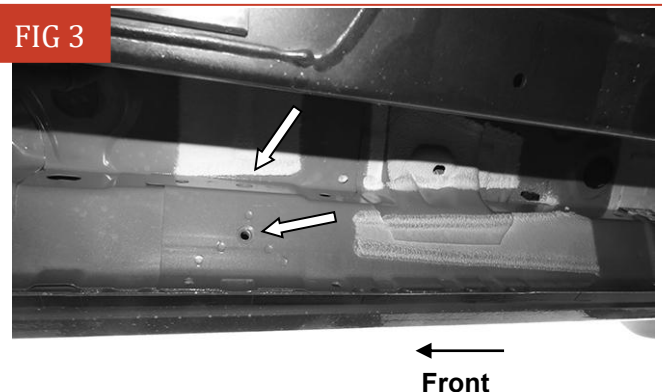

(Fig 3) Passenger/Right center mounting location


REDROCK

FIG 4

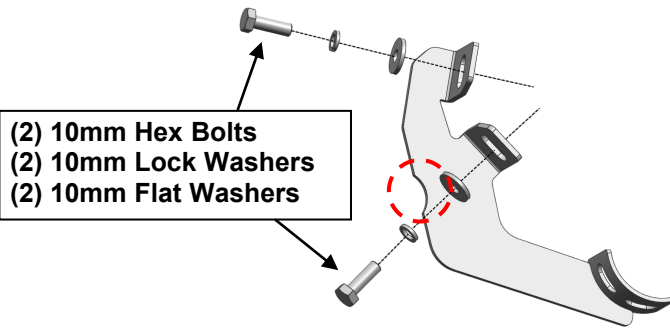


(Fig 4) Attach (1) Passenger/Right Center Mounting Bracket to the center location. **Note: A Bigger Notch** on the rear of the Center Brackets

FIG 5

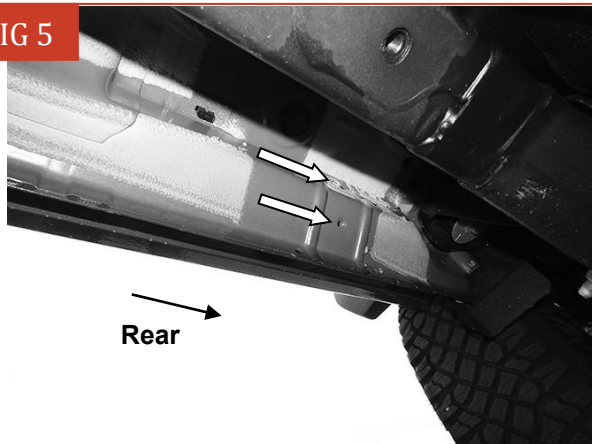

(Fig 5) Passenger/Right rear mounting location

FIG 6

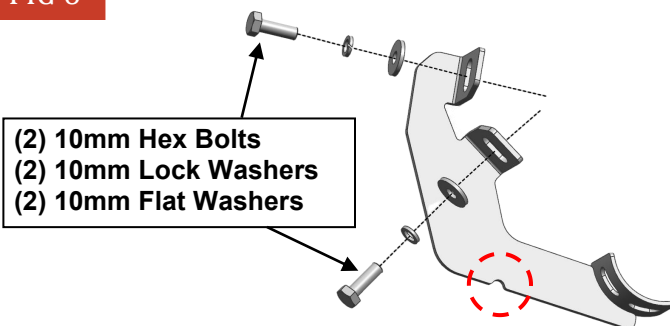


(Fig 6) Attach (1) Passenger/Right Rear Mounting Bracket to the Rear location. **Note: A Smaller Notch** on the bottom of the Rear Brackets

STEP 4

Select the Passenger/Right Running Board. Carefully place Running Board on the brackets. Attach Running Board to the (3) Mounting Brackets with (6) 8mm Combo Bolts, (Fig 7). Do not tighten hardware.

FIG 7

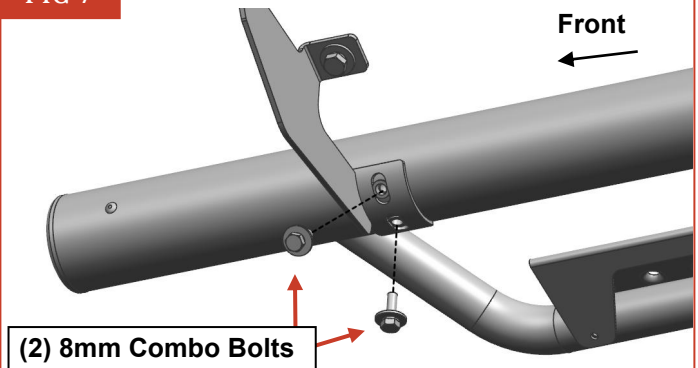

(Fig 7) Attach the Passenger/Right Running Board to the Mounting Brackets

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1—5** to attach the Driver/Left Running Board.

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Attention

To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the finish.

Mild soap may be used also to clean the Running Boards.