REDROCK



BUG DEFLECTOR

(2021-2025+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Bug Deflector Panel
(1) Center Bug Deflector Panel
(1) RH Bug Deflector Panel

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth
Masking Tape
Tape Measure


SKU # FB29145
Edited: 06/02/2025



STEP 1

Clean the vehicle hood using isopropyl alcohol and a microfiber cloth and allow to fully dry.

Test fit the (3) bug deflector panels to the vehicle hood, and familiarize fitment of each panel to the vehicle. Using masking tape may help to locate the center of the vehicle for center panel alignment.

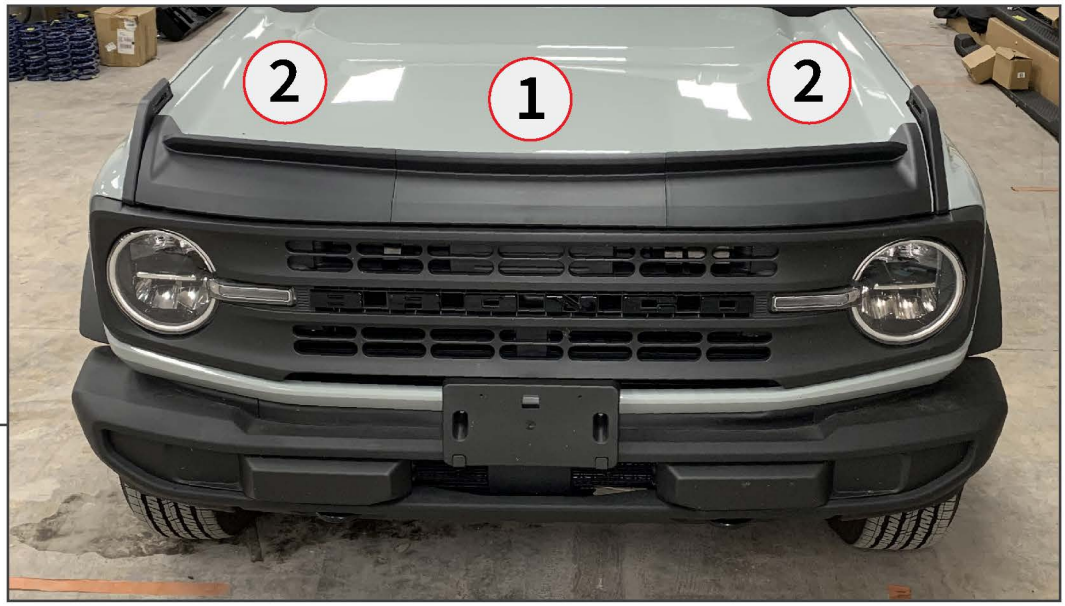

STEP 2

Once familiar with the bug deflector fitment, peel the red tape backing from each panel. Beginning with the center panel, align the panel with the center of the hood and firmly press into place. Then, align and firmly press each side of the bug deflector to the vehicle hood, overlapping the center panel.

Installation is now complete.