



PINCH WELD COVERS

(2021-2024+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Front Panels
(2) Rear Panels
(14) M6 Flange Allen Bolts
(10) M6 Flange Nuts

TOOLS REQUIRED


3mm Allen Key
10mm Socket/Wrench
Ratchet
Exterior Detailer
Microfiber Cloth

SKU # FB59248
Edited: 12/02/2024

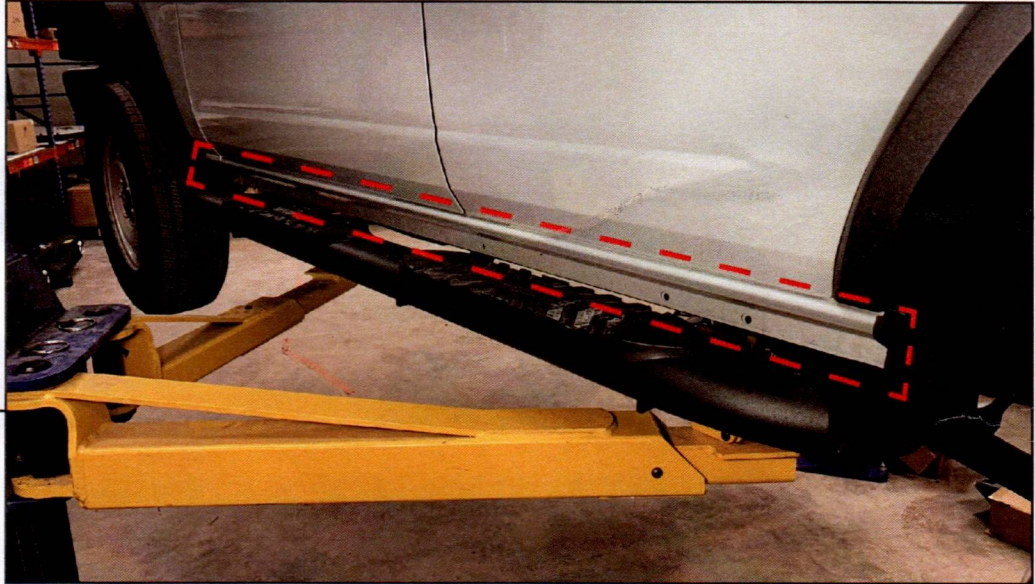

STEP 1

Clean the vehicle pinch weld of dirt/debris using exterior detailer and a microfiber cloth.

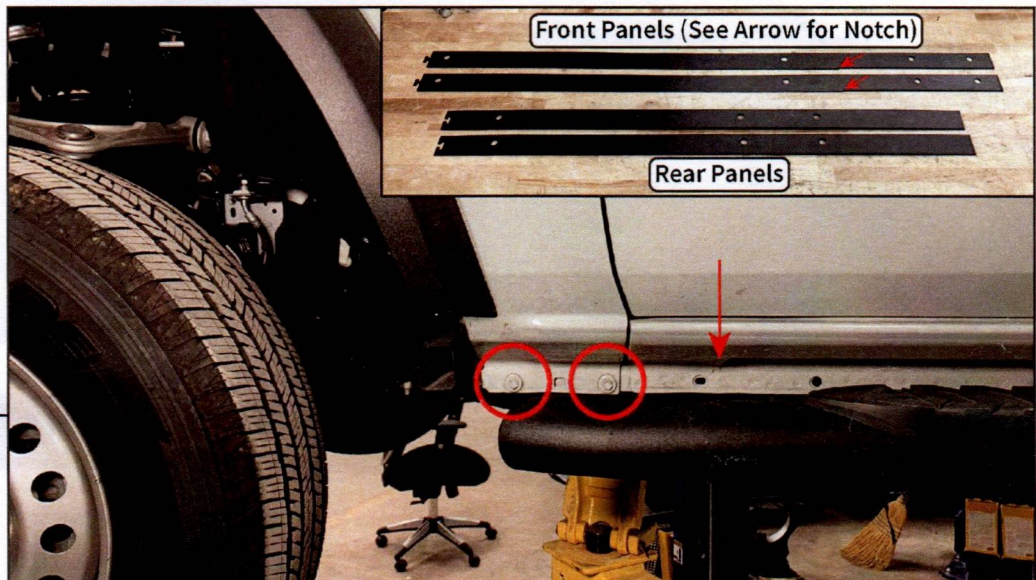

STEP 2

Lay out and identify all pinch weld covers. The front panels have a notch along the top of the panel.

Remove (2) 10mm bolts from the front vehicle fender.

STEP 3



Align the front panel to the vehicle, ensuring the notched portion of the panel is facing upwards. Loosely secure the front of the panel into the fender mounting holes using (2) M6 Allen bolts.

Loosely secure the remaining portion of the cover panel using (3) M6 Allen bolts and (3) M6 flange nuts. Allow the cover to remain loose at this time for later adjustments.

Note: Due to the vehicles curvature along the pinch weld/fender, the panel may need to be massaged into shape for best fit.

STEP 4



Fit the rear pinch weld cover behind the plastic splash guard under the rear door, and then align the rear cover panel cutout into the front panel alignment tab. Once aligned, loosely secure the rear cover to the vehicle using (3) M6 Allen bolts and (3) M6 flange nuts. Align the pinch welds and hardware for best fit, and tighten all hardware evenly until fully secure.

Installation is now complete.