raxiom
advanced lighting solutions



LDS SERIES LED HEADLIGHTS

(2021-2026+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Headlight
(1) LH Side Marker Lamp
(1) RH Headlight
(1) RH Side Marker Lamp
(4) 15mm Screws

TOOLS REQUIRED

8mm, 10mm Sockets
Ratchet
Panel Removal Tool
Phillips Screwdriver

SKU # FB62537
Edited: 07/16/2026

raxiom
advanced lighting solutions

STEP 1




Open the vehicle hood. Remove (9) plastic push clips from the radiator cover. Then, remove the cover from the vehicle.

STEP 2



Remove (4) 10mm bolts from the top of the grille.

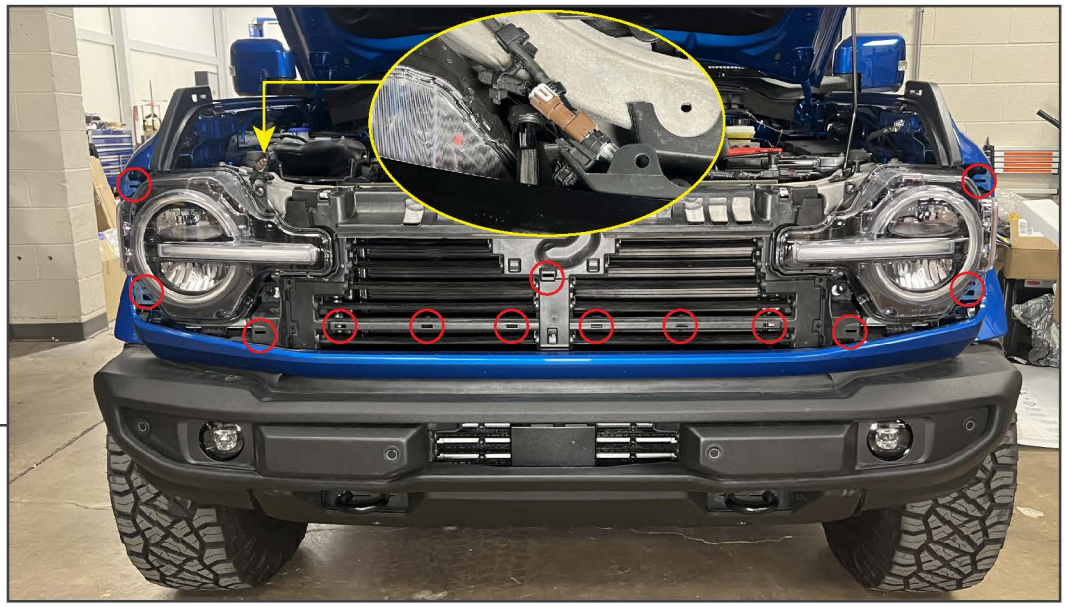

STEP 3

If equipped, unplug the front camera and washer line from the grille assembly.


Firmly pull the grille away from the vehicle to disengage the metal retainer clips. Place the grille on a soft workable surface.



STEP 4

Turn the furthest forward fender flare retainer 90 degrees to disengage the front of the flare, then pull the front of the fender flare outwards. With the front of the flare away from the vehicle, firmly pull the front painted trim panel away from the vehicle, and set aside.


STEP 5

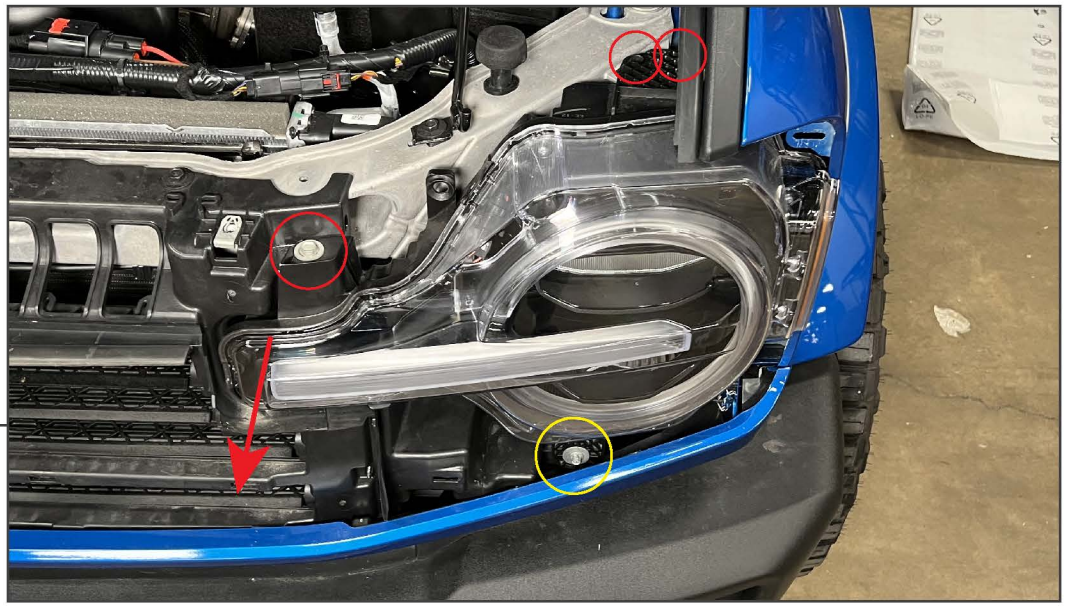


Remove (1) 10mm screw, (1) 10mm bolt, (1) 8mm screw, and (1) plastic push clip from the headlight assembly. Firmly pull the headlight assembly away from the vehicle to dislodge the retainer clip. Unplug the headlight electrical connector harness from the headlight.

Note: OEM hardware will be reused in the original locations. Ensure to note the hardware mounting locations.

STEP 6

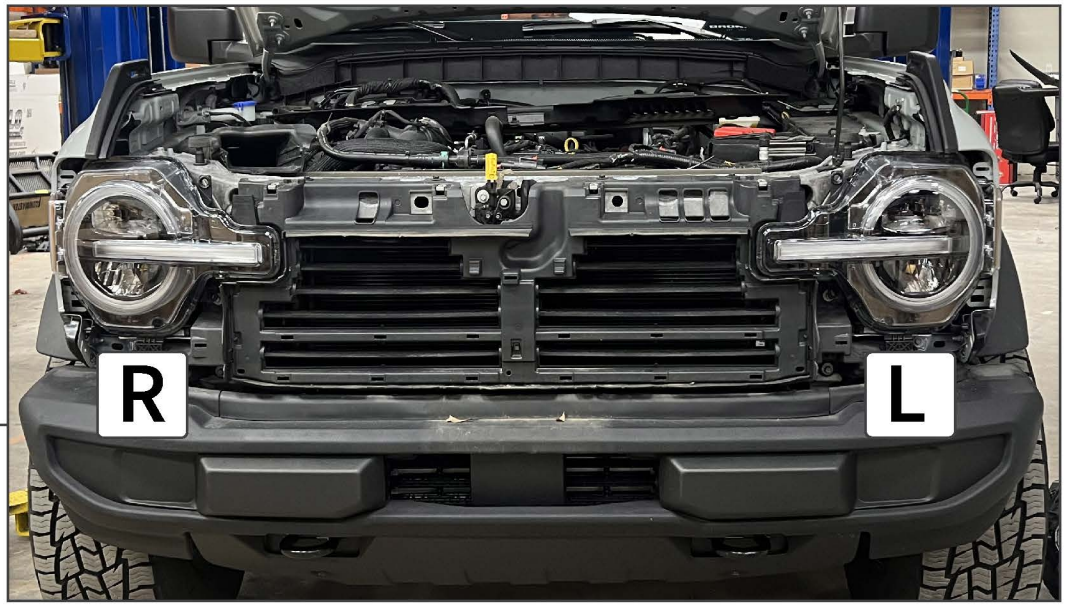

Identify the LH and RH headlight assemblies using the label in the lens. Then, plug in and fit the new headlight to the vehicle. Secure each headlight using the OEM mounting hardware.

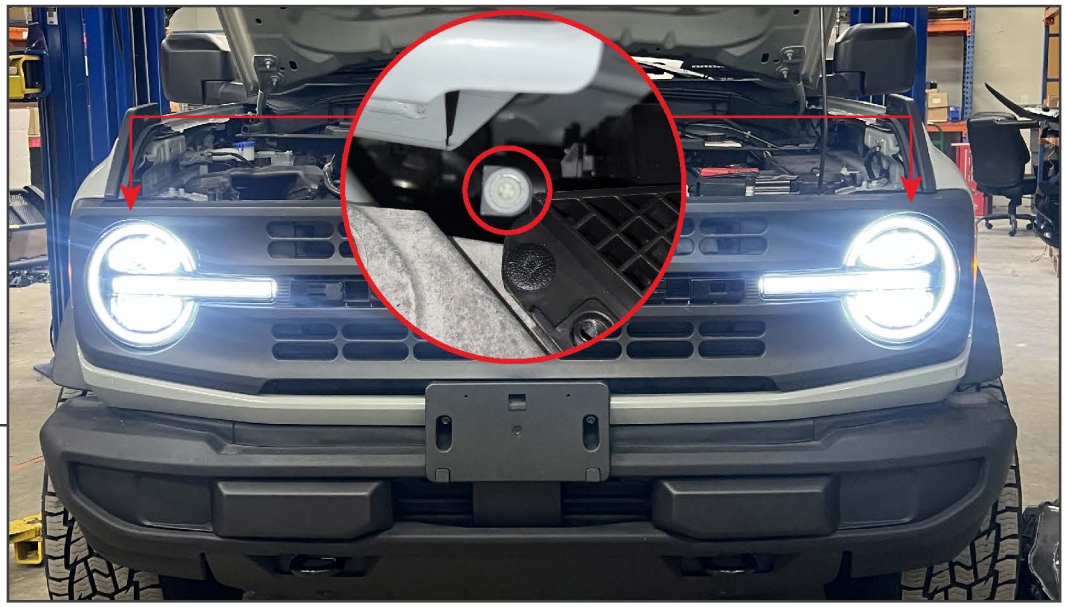

STEP 7

Re-install the OEM vehicle panels following steps 1-4 in reverse order using the OEM hardware.

Power on the headlights and adjust the light beam using the Phillips screw along the top of the headlight housing.



STEP 8

Installation is now complete.